

RS404K INSTRUCTIONS




TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY


SHIFT SIDE EXPLODED VIEW

Standard Shift



INDEX

-  Lubricate
-  Thread Lock
-  Use Factory Piece

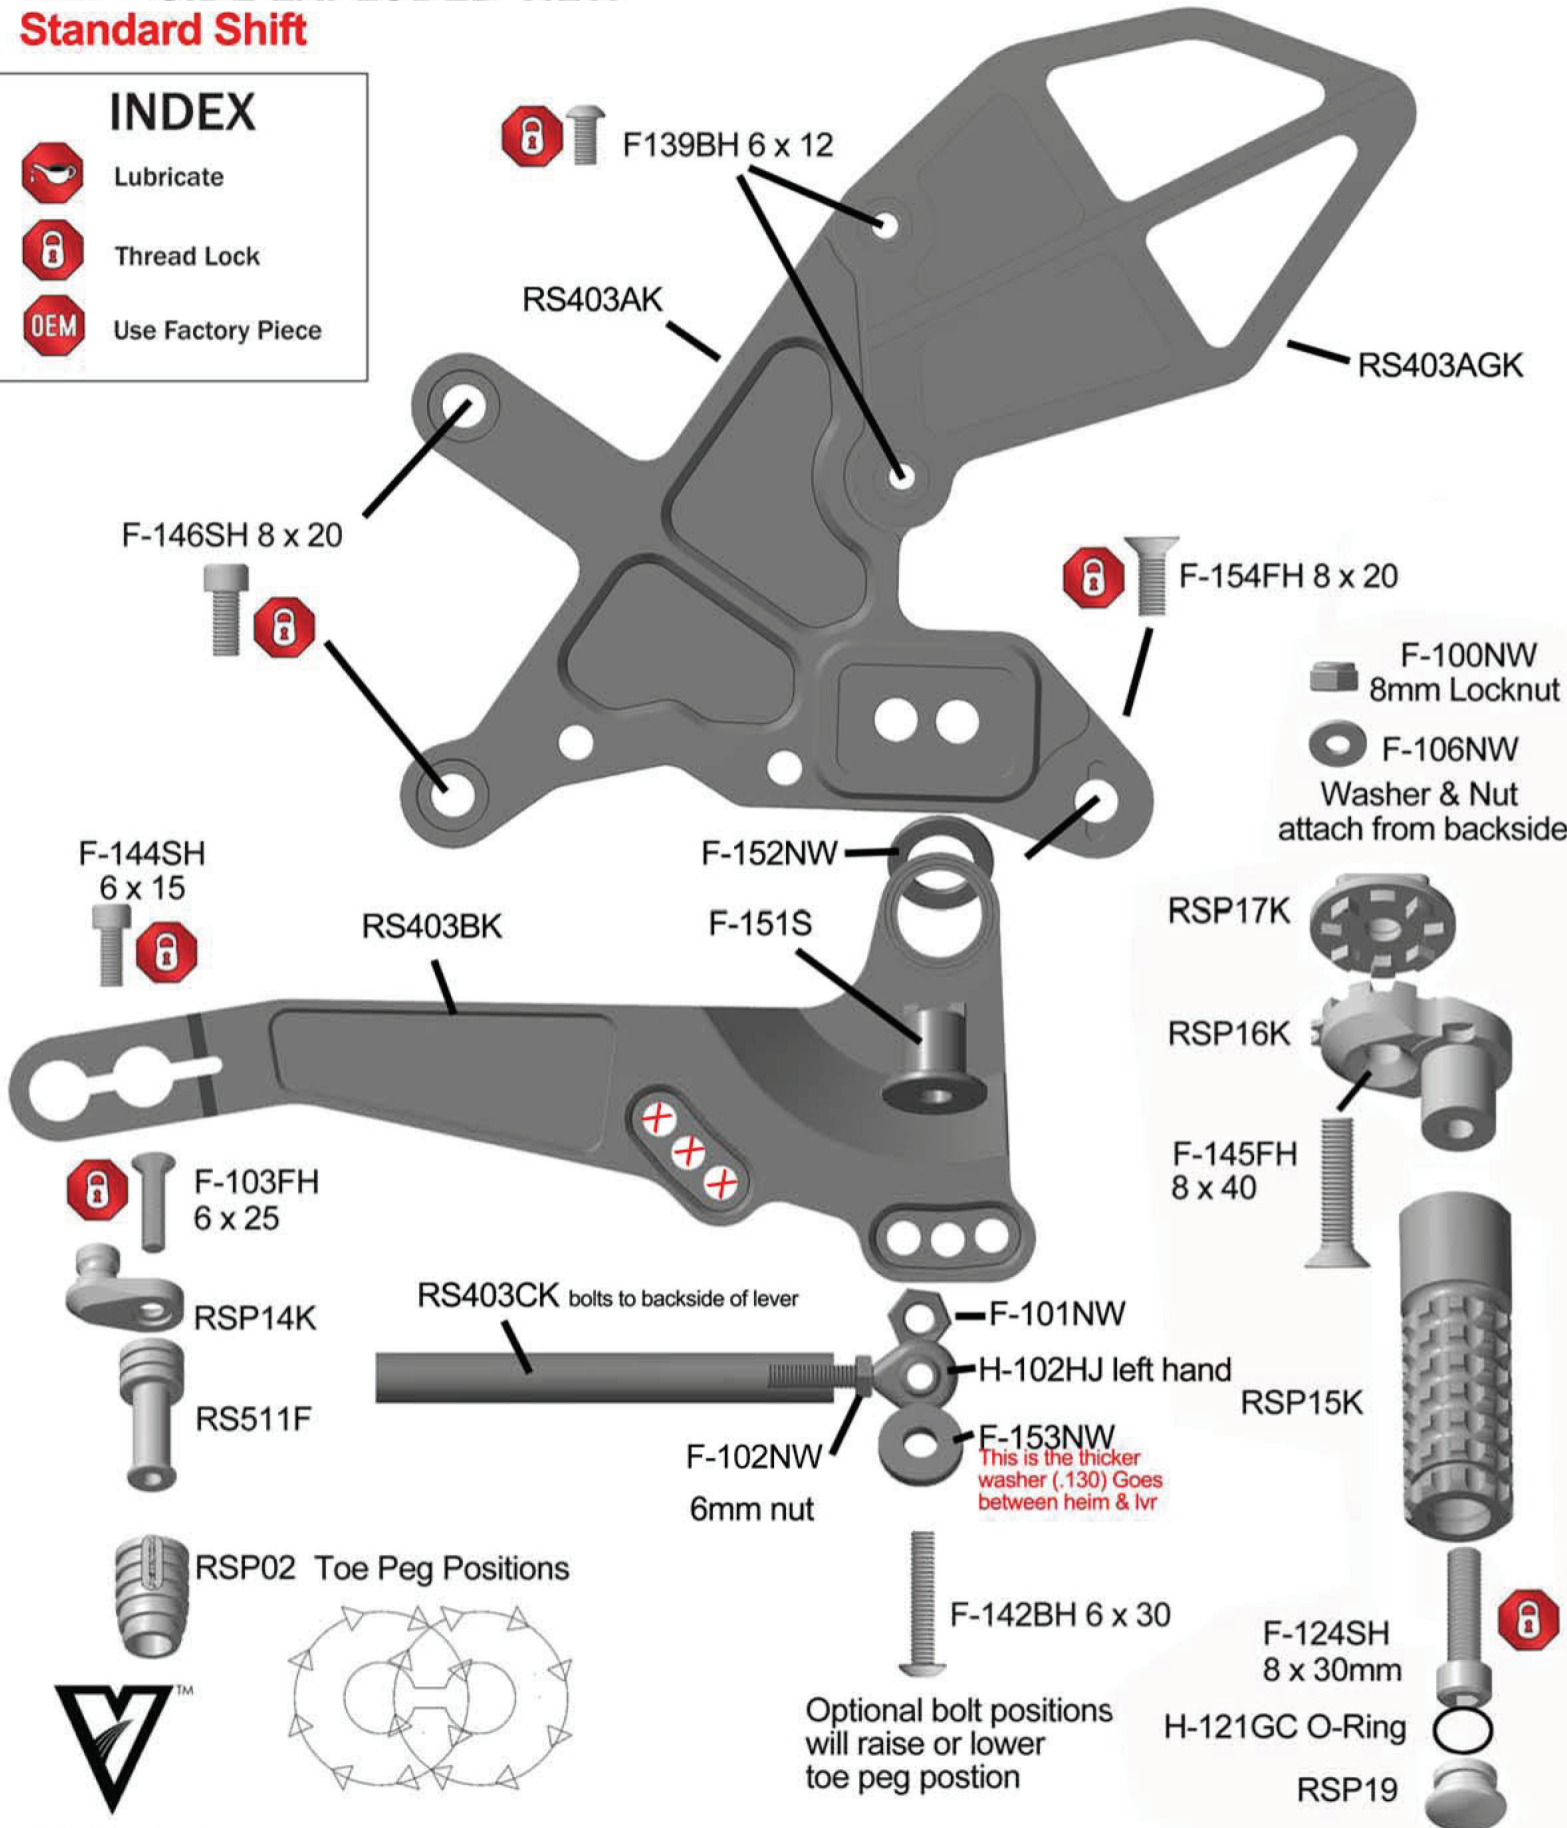

RS404K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY


SHIFT SIDE EXPLODED VIEW

GP Shift



INDEX

-  Lubricate
-  Thread Lock
-  Use Factory Piece

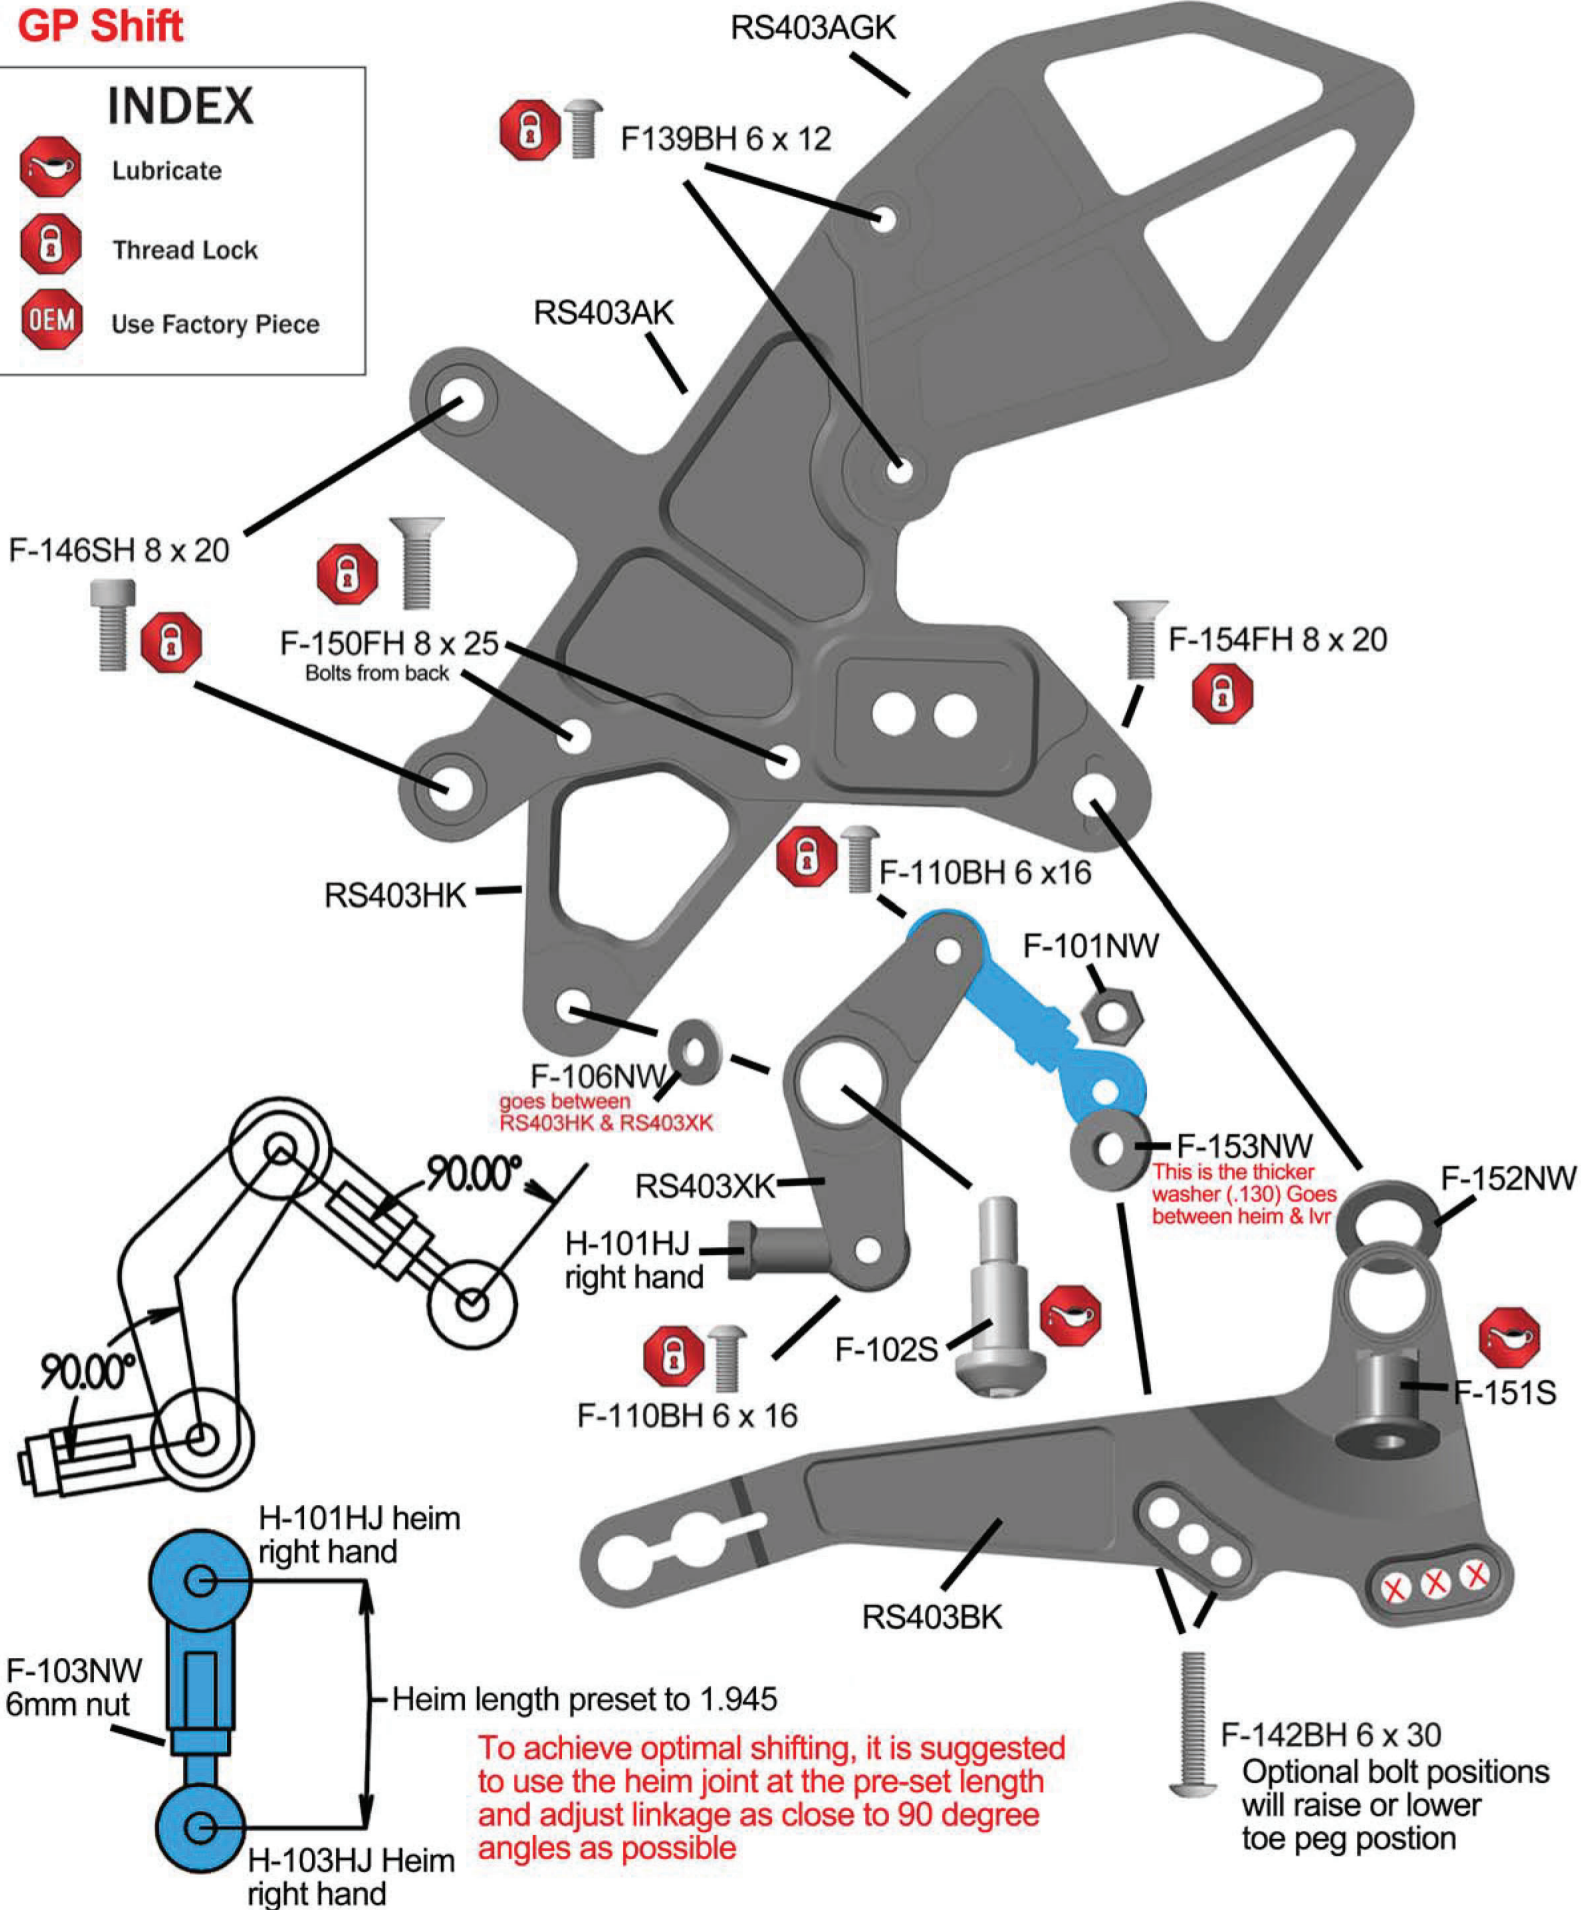

RS404K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

BRAKE SIDE EXPLODED VIEW



INDEX

-  Lubricate
-  Thread Lock
-  Use Factory Piece

