



RS404K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

How to adjust Footpeg positions

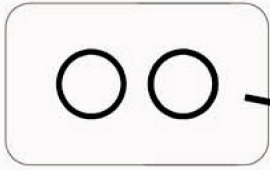

1) Decide which mounting hole in pocket to use.

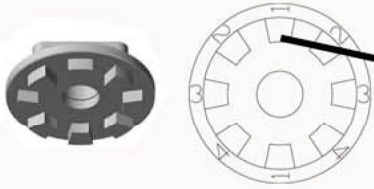


2) Position #1 at 12 o'clock position for shift and brake. Be sure other numbers are not upside down.




3) Tab reader will indicate which position you are on.
CAUTION - Each number has two positions. Be sure to use the same position for shift and brake side.

Example

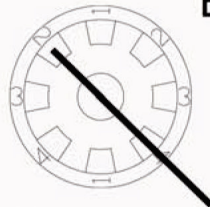



#2 position

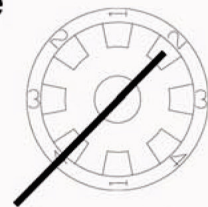

#2 position

 OEM Footpeg position

Adjustment Positions

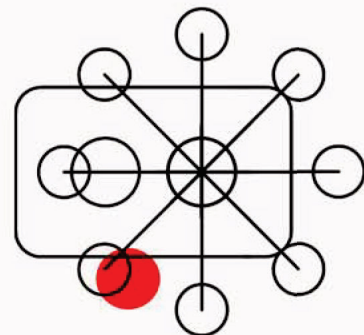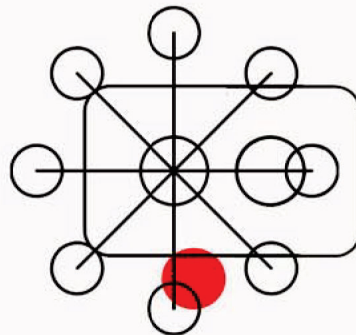

Adjustment Range

Back	27mm
Forward	19.25mm
Up	30.75mm
Down	3.6mm



1.800.440.3559

www.VORTEXRACING.com