
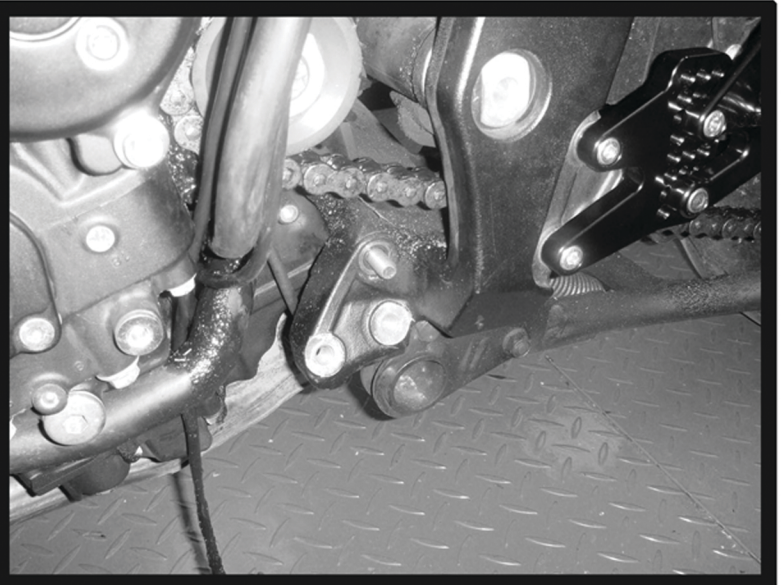





**Step 1. Reverse stock bolt**

# RS684K

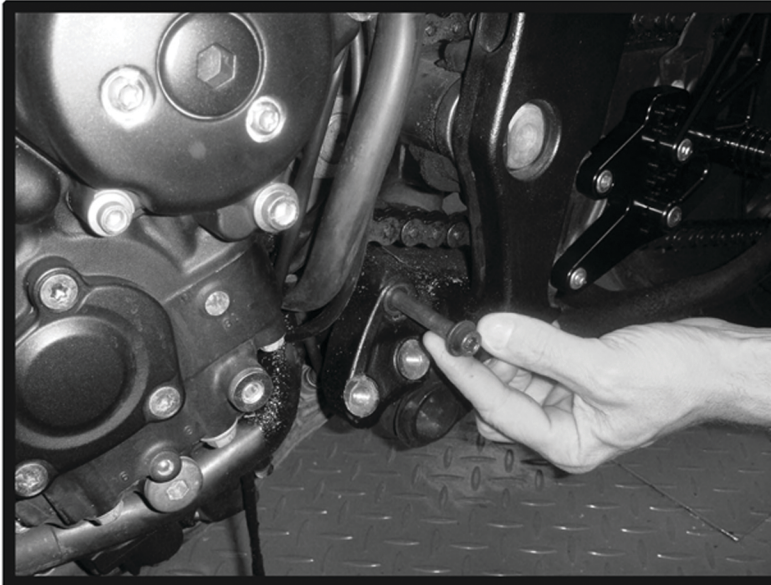


**Step 2. Attach RS684L1**

**Step 3. Attach RS684BXK**

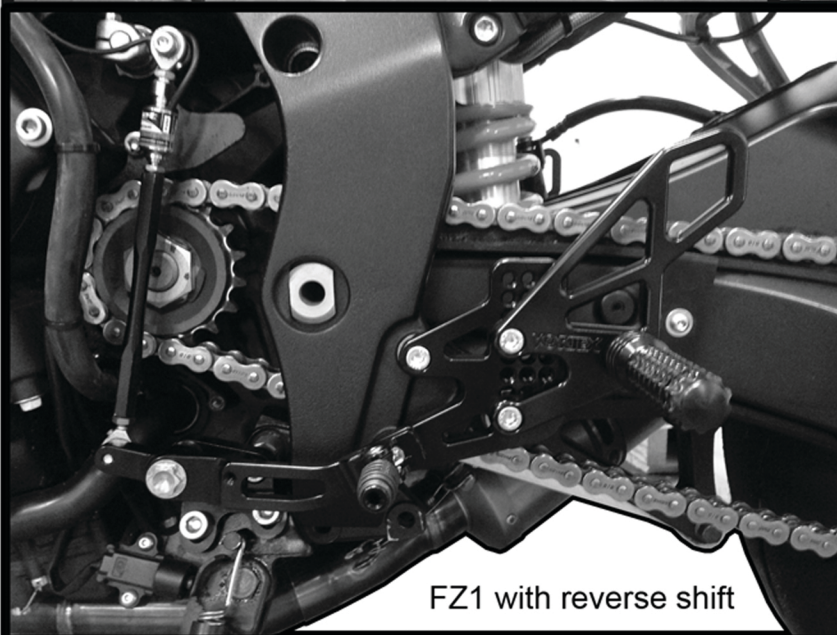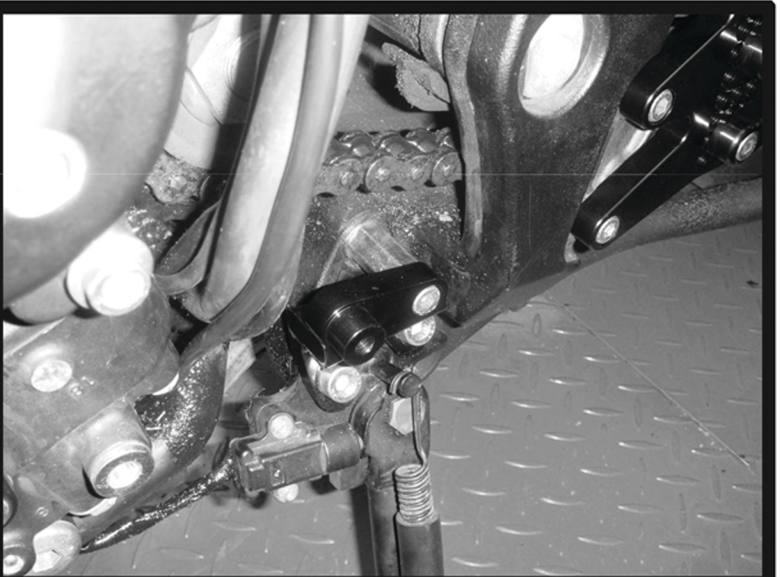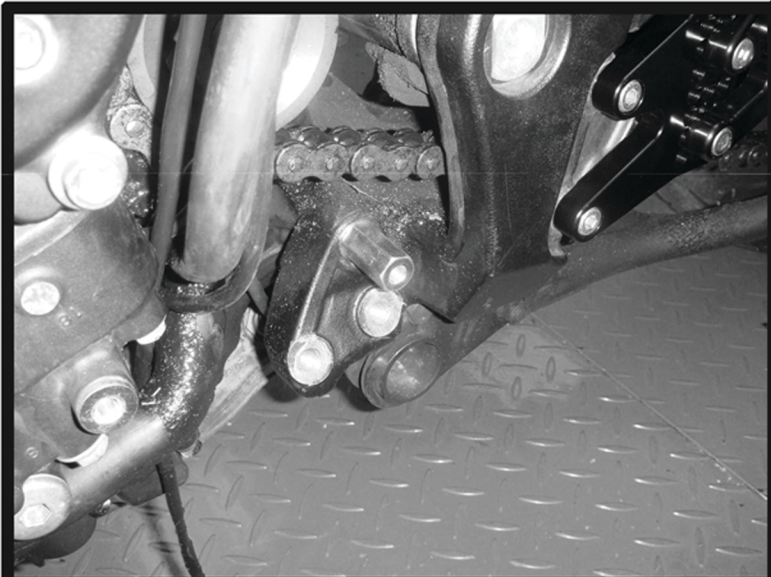

FZ1 with reverse shift

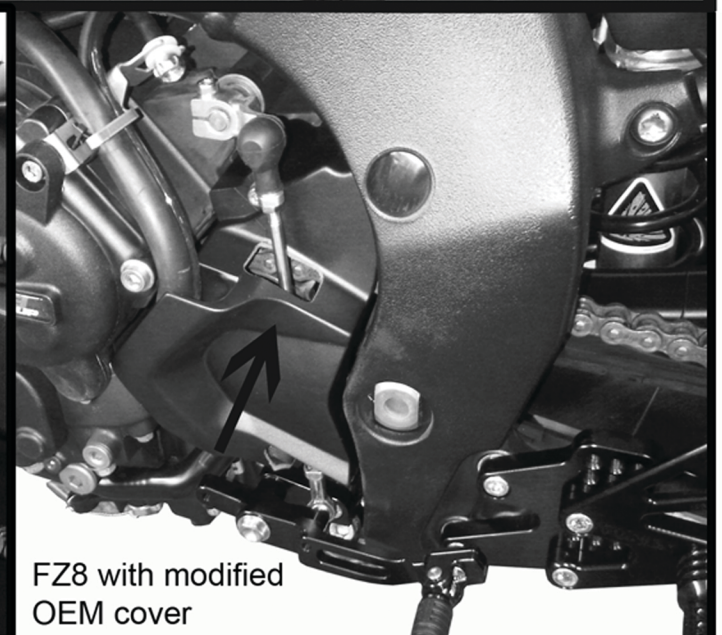

FZ8 with modified OEM cover